



# SMALL SYSTEM DATA SHEET



## ANALOG inLOOP

Package contains amplifier, power supply, 150' of 20 gauge wire and 6' RCA cable and adapter  
 Power requirements - 100 - 240 volts AC ~ 50/60Hz 18 volt/amps  
 Coverage - IEC 60118-4 compliant as tested at 600 sq ft  
 Inputs - 1 microphone/line with phantom power available. Built in microphone  
 Controls - Tone control. Loop volume control. Power switch.  
 Dimensions - 7" x 2.75" x 3.125" 3 lbs  
 Power Supply Approvals - UL ULC CE



## DIGITAL inLOOP

Package contains amplifier, power supply, 150' of 20 gauge wire and 6' digital optical cable  
 Power requirements - 100 - 240 volts AC ~ 50/60Hz 18 volt/amps  
 Coverage - IEC 60118-4 compliant as tested at 600 sq ft  
 Inputs - Digital optical or coax.  
 Controls - Tone control. Loop volume control. Power switch.  
 Dimensions - 7" x 2.75" x 3.125" 3 lbs  
 Power Supply Approvals - UL ULC CE




## inLOOP 1200

Package contains amplifier, power supply, 200' of 18 gauge wire and 6' digital optical cable  
 Power requirements - 100 - 240 volts AC ~ 50/60Hz 60 volt/amps  
 Coverage - IEC 60118-4 compliant as tested at 1200 sq ft  
 Inputs - 3 - 1 line, 1 mic/line with 5 volts of phantom power, digital optical or coax.  
 Controls - Tone control. Loop volume control.  
 Dimensions - 6" x 4" x 2" 3 lbs  
 Power Supply Approvals - UL ULC CE



## PERSONAL PAD ANTENNA

Package contains Personal loop pad with 33' of 22 gauge wire.  
 Dimensions - 16" x 16" x .125" 1 lbs

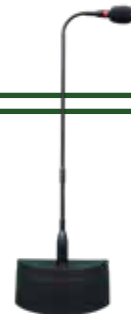

## COUNTER inLOOP

Package contains amplifier, power supply, loop antenna, velcro and microphone.  
 Power requirements - 100 - 240 volts AC ~ 50/60Hz 18 volt/amps  
 Controls - Tone control. Loop volume control. Power switch.  
 Dimensions - 7" x 2.75" x 3.125" 4 lbs  
 Power Supply Approvals - UL ULC CE



**SMALL SYSTEM WARRANTY** - This limited lifetime warranty covers the loop amplifier and enclosure. The loop amplifier is warrantied to be free of defects in material and workmanship for the life of the product under the following schedule and conditions: The warranty does not cover damage from misuse, power surges or improper installation. We will provide ground shipping, and repair systems that meet these criteria for six months. We will repair and provide return shipping from six months to twenty-four months. For the remainder of the life of the product we will repair systems that meet these criteria with the customer providing shipping. Cords, cables and power supplies are warrantied to be free of defects in material and workmanship for a period of one year.

**inLOOP products are made in the USA** Some cables, power supplies and electronic components attached to the circuit boards are not available in our country and have to be imported.



# COUNTER HEARING LOOP INSTALLATION AND ADJUSTMENT

The design and installation of the transmission antenna in a hearing loop system is critical to proper system performance and signal reproduction. inLOOP provides free training, technical support and design help. Please contact us for design help or approval.

**ATTACH THE ANTENNA** - Select a location for the inLOOP pad antenna under the counter. Pick a spot that is as close to the listener's ear as possible. For best transmission, mount the pad 50% horizontal and 50% vertical. Remove the release paper from the velcro strips and mount the pad in the selected location.



External microphones can be installed through the microphone port on top of the Counter Loop unit



Secure the wire connectors from the pad into the LOOP WIRE connectors on the rear of COUNTER inLOOP.



**ADJUST** the volume by turning the volume knob on the rear of COUNTER inLOOP.